
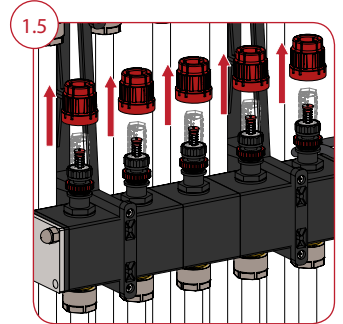
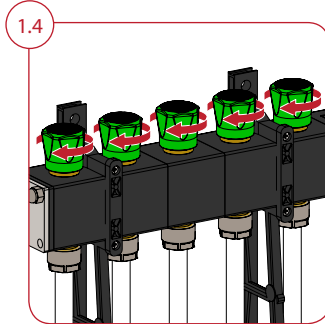
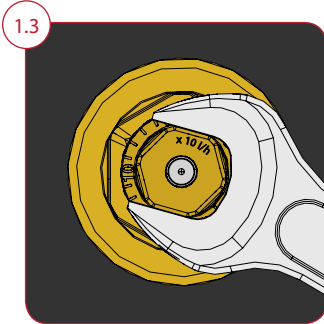
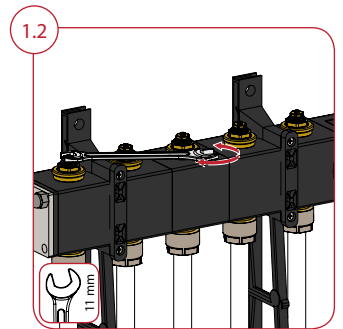


Quick Installation Guide



Auto Flow Control (A.F.C.)

1.

Inregelen
Adjusting
Regulierung
Réglage

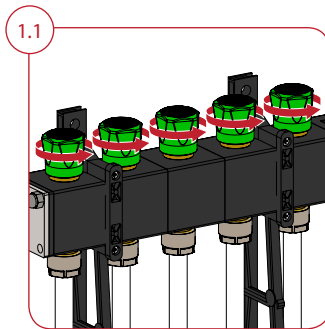

Max. 1x 360° sluiten / Max. 1x 360° close /
Max. 1x 360° schließen / Max. 1x 360° fermer

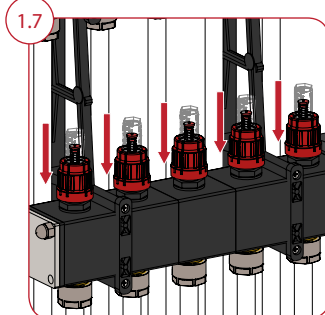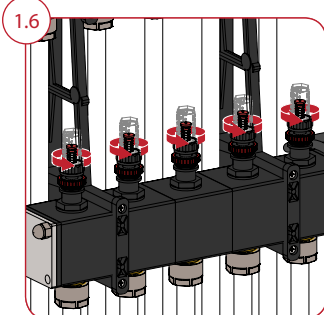


Flowmeters 100% openen / Open flow meters 100% /
Durchflussmesser 100% öffnen / Débitmètres
ouverts 100%

Quick Installation Guide


Auto Flow Control (A.F.C.)

2.

Zonemotoren
Thermal Actuators
Stellantriebe
Actuateurs


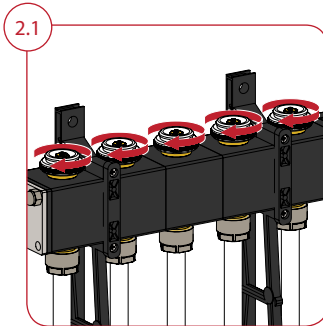


Optioneel / Optional / En option

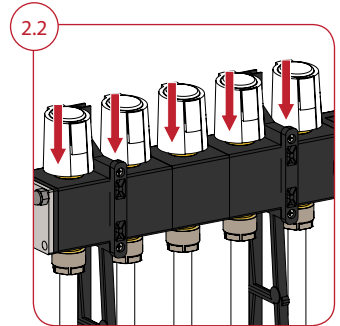

Optioneel / Optional / En option

L/H	30	40	60	80	100	120	140	160	180
L/H	20	220	240	260	280	300	30		Afgesloten/closed

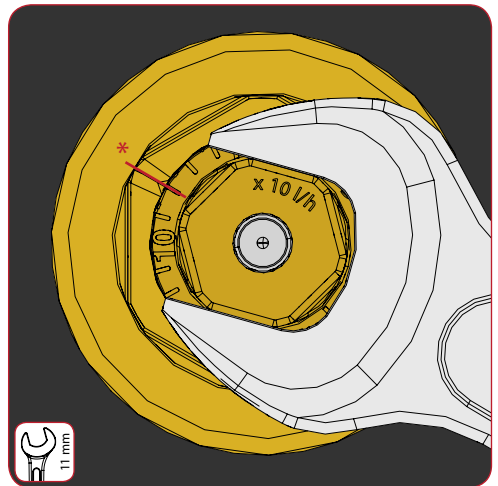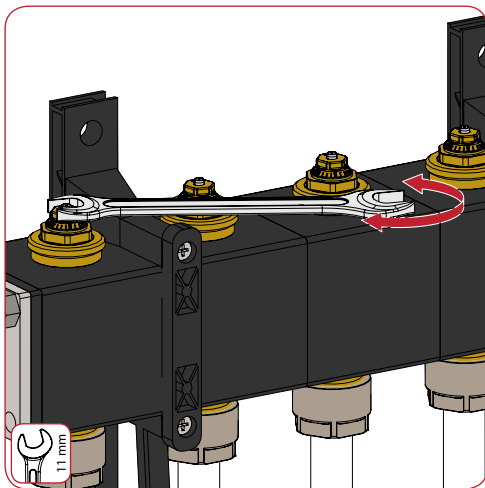

* Ingestelde waarde / Set value / Der eingestellte Wert / La valeur de consigne